







Generating Set Base Frame - Diesel

GE.DW.1000/900.BF+011

1500 rpm - Trifase - 50Hz - 400V Automatic panel without switching on board



Standard equipment

Exhaust

Exhaust manifold protection Exhaust flexible expansion joint Silenced muffler -15dB(A)

Fuel Supply

Fuel connections Automatic shutdown system for low fuel level

A Handling

n.4 lifting hooks integrated into the bearing structure

Base Frame

Anti-vibrating mounting pads

Engine

Engine pre-heater 230V

High coolant temperature and low oil pressure shutdown system

Oil pressure and coolant temperature gauge (only with QPE or +14 variant)

Engine liquids (oil and antifreeze)

Rotating parts protection

Electronic speed governor

Radiator level sensor

Alternator

AVR Automatic Voltage Regulator AVR Pre-arranged for parallel Three-phase sensing AVR Impregnation for marine environment IP23

Panel & connection

Emergency Stop button Magnetothermal circuit breaker on alternator board Cable output from side IP44 wiring Start-up battery (pre-charged) Grounding point

Documentation

CE conformity declaration User and Maintenance manual Wirings diagrams

Normatives

All Generating sets are compliant to CE Marking 2014/30/UE Electromagnetic compatibility 2000/14/CE Noise Emission for outdoor use Factory-designed systems built according to ISO 9001:2015 CEI EN 60204-1:2018 - Electrical equipment of machines















Primary data

General Information

Speed	RPM	1500
Frequency	Hz	50
PRP	KVA	900
PRP - Prime power	KW	660
LTP - Standby power	KVA	1000
LTP - Standby power	KW	800
Standard Voltage	V	400/230
Current	А	1300.58
Voltage for current calculation	V	400
ronage for carrent careanation		0,8
COSFI	0,8	0,8
COSFI General electrical protection		
COSFI	0,8 A	1600 Magnetothermal switch on the alternator board
General electrical protection Rated current		1600
General electrical protection Rated current Type Poles	А	1600 Magnetothermal switch on the alternator board
General electrical protection Rated current Type	А	1600 Magnetothermal switch on the alternator board
General electrical protection Rated current Type Poles Fuel Consumption	А	1600 Magnetothermal switch on the alternator board 4P
General electrical protection Rated current Type Poles Fuel Consumption TYPE	A N	1600 Magnetothermal switch on the alternator board 4P Diesel
General electrical protection Rated current Type Poles Fuel Consumption TYPE Standard Fuel Tank capacity	A N	1600 Magnetothermal switch on the alternator board 4P Diesel No tank

General da	ta
------------	----

Rated capacity	Ah	4x180
Auxiliary Voltage	V	24
Exhaust gas temperature	℃	530
Exhaust gas flow	l/s	2170,8
Combustion air flow	l/s	777,6
Cooling fan airflow	mc/s	21,1

Weight and Dimensions

Dimensions (L x W x H)	cm	430x200x240
Weight with liquids (excluding optionals and fuel)	Kg (+/-3%)	5039





*	Fn	ai	ne
484		aı	116

Factory		Doosan
Model		DP222 CC
Emissions stage		Stage 0
Speed governor		Electronic
Radiator	°C	40
Cooling	Tipo	liquid (water + 50% Paraflu11)
Active net power	Kwm	769
Nominal net power	CV	1045
Cycle	Tipo	4 strokes
Injection	Tipo	Direct
Aspiration	Tipo	Turbo
Numbers of cylinders	N	12
Cylinders arrangement		V
Bore	mm	128
Stroke	mm	142
Total displacement	lt	21,927
Engine oil features		15W40-API CI-4/CH-4 ACEA E5-E7
Total oil capacity	lt	75
Total coolant capacity	lt	90
ISO 8528-5 class		G3

The emission levels of the exhaust gas are indicated in the engine technical datasheet. Any changes due to more restrictive regulatory adjustments are excluded.

Alternator

* May vary based on stock availability. However, a primary brand will be used.

Factory		Stamford
Model		S6L1D-D
PRP continuous power	KVA	940
Voltage Regulator (voltage accuracy)	+/- %	0,5
Poles	N°	4
Phases	N°	3+N
Standard windings connection		Star Series Star Series
Stator/rotor impregnation		H (Outdoor Temp 40°C)
Efficiency	%	95
Engine coupling		Elastic disk
Short circuit current		>= 300% (3In)
Protection degree	IP	23
Cooling system		Self ventilating
Maxium overspeed	rpm	2250
Waveform distortion	%	<5
Exciter		PMG

Standard operating environmental conditions

Ambient temperature	°C	25
Relative Humidity	%	30
Max altitude	mt	1000






₩ GE.DW.1000/900.ST.BF+011

Control Systems on board QPE-C-SC-3F-V1



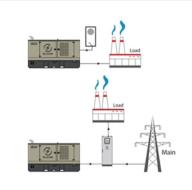

operating scheme - schema di funzionamento

The QPE-C control panel represents the evolution of the panel for the control and management of the gen set. With its microprocessor logic it is able to meet any user requested features. The dual operation mode manual and automatic guarantees to every type of functionality protection, analysis and control of the generating set in order to make the management easy and efficient. Variant without transfer switch on board. ATS panel type QC as optional. The panel manages the QC panels directly or any other ATS panel.

Mechanical features

Protection degree	IP	55
Totection degree	11	

Battery charger

Model		ELCOS - CB1
Maximum output current	Α	2,5
Output DC voltage (selectable)	Vdc	12-24
Input AC voltage (selectable)	Vac	220-260
Frequency	Hz	50-60

Data Communication

Data connection port	RS-485
Communication protocol	Mod-bus RTU-8N1

Remotable functions in terminal box

GS start
Genset contactor close/open command (1)
Common Alarm - DC output
GS start with key in OFF position (Only in MRS mode)

GS lock
Mains contactor close/open command (2)
GS test without load
Programmable output - Volt free output





Model MC4 AMF - MRS Operating mode

Specifics

Applications

Emergency to the Mains Stand-alone Construction site/Rental Self-production

ENGINE MEASURES

Fuel tank level %

Engine oil pressure BAR (1)

Engine Coolant temperature °C (1)

Total run time

Partial run time

Hours to maintenance

Battery voltage Battery charging voltage

Start-ups counter

Engine speed (2)

Engine Oil temperature (2)

Cooler temperature (2)

Engine oil level (2)

Engine coolant level (2)

Engine coolant pressure (2)

Turbo pressure (2)

Fuel Consumption (2)

Tank autonomy - hrs (5)

Fuel remaining quatity (5) Fuel used quantity (5)

ALTERNATOR MEASURES

Generator Voltage L1, L2, L3 Generator Voltage L1-N, L2-N, L3-N

Generator frequency

Generator current L1, L2, L3

Generator Apparent Power kVA

Generator Active Power kW

Generator Reactive Power kVAR

Generator accumulated power kWh

Power factor Cosfi

MAINS MEASURES

Mains voltage L1, L2, L3

Mains voltage L1-N, L2-N, L3-N

Mains frequency

COMMUNICATION PORTS

Can-bus port

RS485 port with Mod-bus RTU communication

RS232 port for display connection

USB port for parameters saving and firmware

update

EQUIPMENT

Microprocessor Logic

Back-lit display

Programmable from display

16 event log

Multiple display languages

STOP button

START button

TEST button

Reset alarm button

Alarm mute button

Fuel transfer pump activation button

Glow-plug activation button

PRE-ALARMS/ ALARMS

Common Alarm

Fuel reserve (pre-alarm)

Low fuel level (alarm)

Tank overflow

Charge alternator failed (dinamo)

Low oil pressure (pre-alarm) (1)

Low oil pressure (alarm)

Oil sensor failed (alarm)

High coolant temperature (pre-alarm) (1)

High coolant temperature (alarm)

Low coolant temperature (pre-alarm)

Low water level (1)

Water in fuel (1)

Battery undervoltage Battery overvoltage

GS failure to start

GS failure to stop

Can-bus Failure

No Can-bus communication

Genset overload L1, L2, L3 phases

Genset short circuit Genset overvoltage

Genset undervoltage

Genset high frequency

Genset low frequency

overspeed

Reverse power

Earth fault (pre-alarm)

Earth fault (alarm)

Block from password CAN communication Failed

Maintenance request

Emergency button pressed Remote emergency active

Forced stop

External battery failed

Fuel theft

Genset negative phase sequence

Mains negative phase sequence

Fuel theft protection

VISUALIZATIONS ON CONTROL MODULE/DISPLAY

Pre-alarms

Alarms

Engine measures

Alternator measures

Mains measures Date and time

Operating mode

Genset status

Mains status

Mains contactor status

Genset contactor status

Digital Input and Output status

Grounding current mA (3)

Grounding current threshold mA (3)

Delay time of differential protection (3)

Glow plugs status

CONTROL MODULE FUNCTIONS

Automatic start and stop when the Mains Fails (7)

Remote Start and Stop

Remote Start and Stop with key in OFF position

Manual Start and stop

Emergency stop button on panel board

Remote emergency stop

Remote lock Remote test without load

Remote test on load Scheduled start-ups

MODBUS commands (Start, Stop, Reset, Test)

CONTROL MODULE SPECIAL FUNCTIONS (on demand)

Automatic charging of an external battery

Dummy load (4)

Load shedding (4) Redundant starter motor management

Fuel monitoring

GS battery Load test

Idle mode

Service phone number indication Variable speed Generator Master / Slave mode

(1) Present with the sensor installed on engine

(2) Present according to the engine equipment and to the ECU type (ECU - Canbus)

(3) Present only with the residual current device mounted on genset board

(4) Present with optional expansion modules

(5) Present with special function activated (6) Only with the optional of the automatic fuel refilling system on board

(7) Only in AMF mode





OPTIONAL

Fuel Supply



O.G-ACO-AT-C3V-03	External fuel tank connections with 3-way valve for supply from internal or external tank (750/3000 kVA)
O.G-ACO-BT-B4500-1000	1000 Lt Oversized Fuel Tank on board for BF (900/1100 kVA), (Increased weight and size)
O.G-ACO-BT-B4500-2000	2000 Lt Oversized Fuel Tank on board for BF (900/1100 kVA), (Increased weight and size)

Electrical on board



O.Q-QPE-485.CONV-LAN Converter 485/LAN for QPE-C, QLE-B panel



O.Q-QPE-485.CONV-USB	Converter 485/USB for QPE panel
O.Q-QPE-DIS-MS.01	MASTER/SLAVE device for QPE panel
O.Q-QPE-K-DIF	Differential protection adjustable for the MC4
O.Q-QPE-MD-QPE-C	GSM remote management modem for QPE panel



O.Q-QPE-PR-QPE-C Remote panel for QPE-C, QLE-B - available only for variant +10/+11



O.Q-QPE-QBM-COM-AMF25 Option with QBM COMAP AMF25 controller on board instead of QPE



O.Q-QPE-QBM-DSE-7320 Option with QBM DSE7320 controller on board instead of QPE.



O.Q-QPE-RIL-16RELE 16-relay module for QPE panel



O.Q-QPE-RX8-QPE-C Start-stop radio control with max. radius 500 mt indoors and 5 km outdoors (for QPE panel).



O.Q-QPE-SAS-02 Auto Start-Stop at load request (QPE, QLE panels)



O.Q-QPE-SCD-01 Anti-condensation heater inside the panel



Switch selector 50Hz 400V / 60Hz 480V O.Q-QPE-SEL-50-60



Remote management system via LAN/GSM 4G with WEB application and GPS location O.Q-QPE-TG-EVO-GPS-4G





fennar.	100
	O 15-6599
	⊕ Q,
-	• •
TELE	AND DESCRIPTION OF THE PERSON NAMED IN COLUMN TWO IS NOT THE PERSON NAMED IN COLUMN TWO IS NAMED IN COLUM

O.Q-QPE-TG-QPE-CRemote management software via LAN for QPE-C, QLE-B panel compatible with Windows XP and 7

Carrie Engine



O.G-MOT-K-40C-06 Engine liquids suitable for -40°C ambient temperature for Gen Sets 750/1100 kVA



O.G-MOT-SC-AC-EL-05 Super hot engine heater 230V with thermostat on board for Gen Sets 750/1100 kVA



O.G-MOT-SE-LR-03 Radiator coolant level sensor from 750 to 3000 kVA

ATS Panels



QC4.1600A Separate ATS panel, ABB 1600A motorized change-over (1050 kVA 400V) Dim. 80 x 80 x 190 cm - 270 kg. (ex QC4.1050)

Exhaust



O.G-SCA-MR-08 Residential muffler -35 dBA (750/1100 kVA)



O.G-SCA-PF-06 Spark arrestor for Gen Sets 750/1100 kVA

PRP

Engines of this rating provide unlimited hours of usage in a variable load application. The average load factor should not exceed 70% of the engine's prime power rating with a maximum number of 500 operational hours at 100% prime power rating. An overload capability of 10% is available, however, is limited to a period of 1 in every 12 hours

LTP

Limited-time running power is defined as the maximum power available, under the agreed operating conditions, for which the generating set is capable of delivering for up to 500h of operation per year with the maintenance intervals. The overload is not allowed.